



Quick guide for setting adjustment FlexPrint Unlimited

Step 1. Open your software on your desk top (can be Array, Raptor or VideoJet Wide Array)

Step 2. Push "CTRL, ALT, 3"

Step 3. Click on the "Setup Cfg" or "RaptorSetup Cfg" box (depending on your software).

Goto:

```
HeadConfiguration.1.Fire.PulseWidth=  
HeadConfiguration.1.Fire.Voltage=  
;Warming: '1' is on '0' is off, temperature is in celsius, TimeOut is in minutes  
HeadConfiguration.1.Warming.On=0  
HeadConfiguration.1.Warming.Temperature=50
```

Make the following changes in the highlighted fields:

```
HeadConfiguration.1.Fire.PulseWidth=29  
HeadConfiguration.1.Fire.Voltage=17  
;Warming: '1' is on '0' is off, temperature is in celsius, TimeOut is in minutes  
HeadConfiguration.1.Warming On=1  
HeadConfiguration.1.Warming.Temperature=40
```

Once you have made any changes, click on "File" and then "Save".

You must completely close out your software and then re-open for your changes to be saved.

You may now re-open the software shortcut and proceed with your job.